

Pull Out Sleepers: including; EV Collection, Florin, Harmony, Rêma Series, *Tranquility** (*discontinued product)

What to expect:

Disassembly Time: 15-20 minutes per chair (General)
(allow additional 20-30 minutes for detailed component disassembly)

Tools Needed

- Personal Protective Equipment (Safety Glasses)
- Torx Bit (T27)
- Socket/Ratchet or Wrench (7/16)
- Screwdrivers (Phillips #2 - #3)
- Utility Knife

Material Content:

- Wood
- Metal (♻️ steel)
- Poly Foam
- Textile (fabric/vinyl)
- Polyethylene Plastic

Component Content:

- Upholstered Arms: (plywood frame w/tnuts and staples, poly foam, textile w/staples (fabric/vinyl), arm caps (solid wood or urethane/steel)
- Upholstered Back (plywood frame w/t-nuts, poly foam, textile w/staples (fabric/vinyl), mounting brackets (steel)
- Upholstered Seat/Seat Extension: (plywood w/t-nuts (steel), poly foam, textile w/staples (fabric/vinyl)
- Pull-Out Mechanism: (♻️ steel, plastic)
- Pull-out Drawer Assembly: (plywood frame w/staple, drawer glides (♻️ steel)
- Hardware: (bolts/screws (♻️ steel)

Pull Out Sleeper:


Mechanism Removal: (typical)

- Use screwdriver (phillips) to remove (4) mounting bolts and remove the front pull out panel
.....
- To allow access to the mechanism, place unit on it's back
.....
- Lift/Pull out the seat/seat extension and allow seats to tilt and rest against back cushion



Pull Out Sleeper: (con't)

- Use screw driver (phillips) to remove screw holding each plastic stop in place and remove from mech
.....
- Lift/pull the seat/seat extension and mechanism as one unit
.....
- Use screwdriver (*phillips*) to remove (4) mounting bolts and remove the seat extension
.....
- Use screwdriver (*phillips*) to remove (4) mounting bolts and remove the pull out mechanism and recycle (♻️ steel)
.....
- Use screwdriver (*phillips*) to remove (3) mounting screws from each side and recycle (♻️ steel)

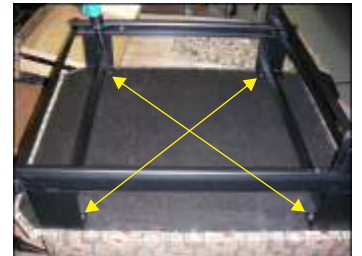

Outside Back Removal: (typical)

- Place the unit on end (arm), Use screwdriver (*phillips*) to remove (3) mounting bolts from each arm and remove the outside back assembly
.....

Inside Back Removal: (typical)

- Remove inside back by sliding the back frame off the pivot mounting plate.

Pull Out Sleeper: (con't)

Caster Removal: (typical)

- Use socket/wrench (7/16") to remove (4) mounting bolts from each caster



Leg Removal: (typical)

- Use screwdriver (phillips) to remove (2) mounting bolts from each leg

